


SUPERIOR C'BOARD



SUPERIOR CLOSEBOARD PANEL

Revolutionising the closeboard panel market. The Superior Closeboard panel is constructed in a fully mortise and tenon jointed frame, which features an integrated capping rail and fine sawn timber boards for a premium look.

Pressure Treated Golden Brown:
 H90 x W183 x D3 cm | **GSCB3**
 H120 x W183 x D3 cm | **GSCB4**
 H150 x W183 x D3 cm | **GSCB5**
 H180 x W183 x D3 cm | **GSCB6**
 Pack Size: 26
 For this product we recommend:
 POST RANGE | **PO***

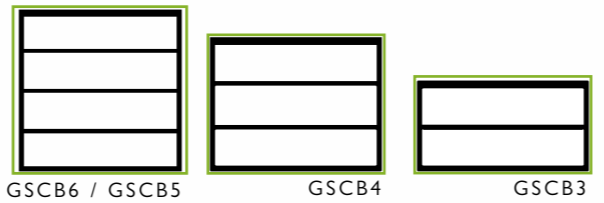

STANDARD FEATHEREDGE PANEL

A stunning panel which is fully framed and features 22 x 100mm wide, featheredge boards and a capping rail.

Golden Brown:
 H92 x W183 x D5 cm | **SFEP3**
 H122 x W183 x D5 cm | **SFEP4**
 H152 x W183 x D5 cm | **SFEP5**
 H182 x W183 x D5 cm | **SFEP6**

Pressure Treated Green:
 H92 x W183 x D5 cm | **SFEP3G**
 H122 x W183 x D5 cm | **SFEP4G**
 H152 x W183 x D5 cm | **SFEP5G**
 H182 x W183 x D5 cm | **SFEP6G**
 Pack Size: 14



For this product we recommend:
 POST RANGE | **PO* / PO*G**

GARDEN GATES



ARCHED FEATHEREDGE GATE

The Arched Featheredge Gate is ideal for use in conjunction with all Grange Featheredge Panels.
Pressure Treated Green:
 H180 x W90 x D6.2 cm | **AFG6**
 Pack Size: 3

BACK OF GATE
 For this product we recommend:
 POST RANGE | **PO8G**
 HINGE SET | **CHBGKIT**



TONGUE & GROOVE LEDGED & BRACED GATE

The sturdy tongue and groove structure provides the gate with its strength and durability.
Pressure Treated Green:
 H180 x W90 x D5.2 cm | **TGLBG**
 Pack Size: 3

BACK OF GATE
 For this product we recommend:
 POST RANGE | **PO8G**
 HINGE SET | **CHBGKIT**



SIDE ENTRY ARCH GATE

The Side Entry Arch Gate is a heavy duty gate which benefits from a sturdy mortise and tenon jointed frame.
Pressure Treated Golden Brown:
 H184 x W90 x D3.8 cm | **SEAR6**
 Pack Size: 3

BACK OF GATE
 For this product we recommend:
 POST RANGE | **PO8**
 HINGE SET | **CHBGKIT**



CLOSEBOARD GATE

A classic vertical board gate with a fresh new look. Re-engineered with fine sawn timber for a smooth and premium finish.
Pressure Treated Golden Brown:
 H181.5 x W90 x D3.8 cm | **SEC6**
 Pack Size: 3

BACK OF GATE
 For this product we recommend:
 POST RANGE | **PO8**
 HINGE SET | **CHBGKIT**

How to hang a Timber Gate

Measuring for a timber gate


When measuring for a gate remember to add the two post sizes to the gate size and a further 20mm overall spacing to allow the gate to freely open and close.

Free standing posts for 6' gates should be at least 100 x 100mm (4" x 4"). Supported posts, either with a top cross member or at the sides, may be smaller. If using a top cross member, it should be at least 2m (6' 6") off ground level.

The hole size for each post should be 600mm deep and 300mm wide. Concrete in the posts with MetCrete or a similar post fix concrete.

Posts may also be fixed to an existing wall.

Ensure the posts are vertically parallel before attempting to fit the gate.

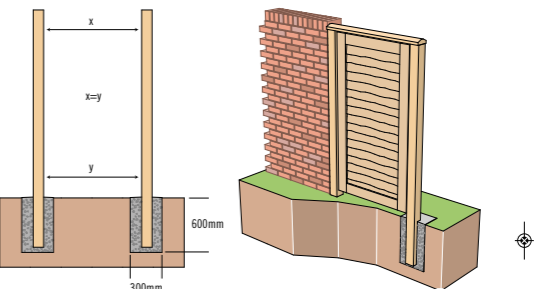

Fitting the gate

Position the gate between the posts and place some 50mm spacers under it. Allow for any unevenness in the ground when the gate is opened.

Now place wedges either side of the gate to even out the gaps either side and to hold the gate in place while fitting the hinges (3).

Fit the hinges, taking care to ensure that the gate opens as intended. Remove all spacers and wedges and check that the gate swings freely.

Finally, fit a gate stop to the frame/post to protect the hinges and latch from damage.

